 




Cynap Pure (Next Gen)

INITIAL SETUP/INSTALLATION

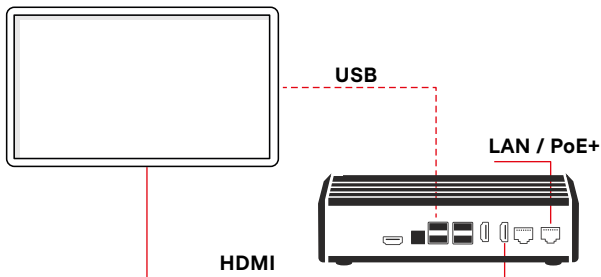

1. Connect an HDMI cable between Cynap Pure (Next Gen) and your display monitor or projector
2. Connect an Ethernet cable to the PoE+ port to power the device and connect to your network
3. Optional for touch screens: Connect a USB cable between your Cynap and your display to enable touch functionality
4. Press the power button to switch on the device
5. Start screen sharing

START SCREEN SHARING



All Apple, Windows, Android and Chrome OS devices

Connect to the Cynap Pure (Next Gen) access point, either by scanning the QR code on screen or connecting manually. Share your screen using AirPlay, Chromecast or Miracast, depending on your device.

Windows

Press the keys



on the keyboard

Apple


Click on



on the menu bar

CONTROL THE DEVICE

Add cameras, files, whiteboard and more with the **orange source button** and manage up to four screens.

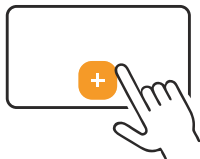

Option

How to start

Touchscreen

Tap the screen

Computer mouse

Connect a mouse via USB

Browser

Enter the IP address shown at the top of the screen into your browser's address bar

Software

Install WolfVision vSolution App on your personal device

Remote management system

Use your installed WolfVision vSolution Link Pro software to manage all your devices

OPTIONAL ACCESSORIES

Feature Pack


An optional Feature Pack is available, that adds an HDMI video input, web browser, document and media player, MS Teams integration and the possibility to receive IP streams.

Power supply

If PoE+ is not available in your environment, a separate power supply is available as an optional accessory.

Please contact your WolfVision partner or local sales representative for more information.

**More information and video guides
in our quick start area**

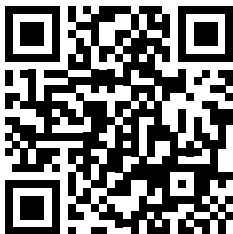

Scan the QR code or visit our website
for more information

[**pure.cynap.net/support**](https://pure.cynap.net/support)