



# **Irideon FPZ**

## **All Luminaire Models**

### **User Manual**

Part Number: 7191M2110 Rev B

Released: 2025-08

To view a list of ETC trademarks and patents, go to [etcconnect.com/ip](https://etcconnect.com/ip). All other trademarks, both marked and not marked, are the property of their respective owners.

For a complete list of all third-party licenses that are fully incorporated herein to the extent required by each third-party license terms and conditions, please visit [etcconnect.com/licenses](https://etcconnect.com/licenses).

Some software or hardware features may not be available depending on your product configuration or region.

The images provided in this document are for illustrative purposes only. Depending on the product details and market region, the information in this document may appear slightly different from your product.

ETC intends this document, whether printed or electronic, to be provided in its entirety.

# Table of Contents

|                                                             |    |
|-------------------------------------------------------------|----|
| Introduction .....                                          | 5  |
| Safety .....                                                | 6  |
| Help from ETC Technical Services .....                      | 8  |
| Install and Connect F-Drive Luminaires .....                | 9  |
| Luminaire Wiring .....                                      | 9  |
| Install Canopy Luminaire (F-Drive) .....                    | 12 |
| Connect Portable Luminaire (F-Drive) .....                  | 13 |
| Install and Connect All Other Luminaires ..                 | 14 |
| Install OneTrack (DMX) Luminaire .....                      | 15 |
| Install OneTrack (DALI) Luminaire .....                     | 16 |
| Install DataTrack Luminaire .....                           | 17 |
| Install Canopy Luminaire (DMX) .....                        | 18 |
| Install Canopy Luminaire (0–10 V and DALI) ....             | 23 |
| Install Portable Luminaire (DMX) on Unistrut<br>Track ..... | 26 |
| Connect Cables to Portable Luminaire (DMX) ..               | 26 |
| Configure DMX Luminaires .....                              | 27 |
| Set the DMX Address at the Luminaire .....                  | 27 |
| Adjust the Local Intensity .....                            | 29 |
| Status LED .....                                            | 30 |
| RDM Values .....                                            | 30 |

|                                      |           |
|--------------------------------------|-----------|
| <b>Initial Power Up</b>              | <b>31</b> |
| 0–10 V Luminaires                    | 31        |
| DALI Luminaires                      | 31        |
| DMX Luminaires                       | 31        |
| F-Drive Luminaires                   | 31        |
| <b>Focus and Setup</b>               | <b>32</b> |
| Adjust the Tilt                      | 32        |
| Zoom and Focus the Beam              | 32        |
| Shape the Beam                       | 33        |
| Rotate the Lens Barrel               | 33        |
| Use the Integrated Media Holder      | 34        |
| <b>Clean the Lenses</b>              | <b>35</b> |
| <b>Specifications and Compliance</b> | <b>37</b> |
| FCC Compliance                       | 37        |




# Introduction

The Irideon FPZ takes the beauty and punch of the Source Four Mini LED and puts it into a luminaire designed to work in any architectural environment. The Irideon FPZ Plus boosts the light output to even greater levels.

The luminaire has three available mounting options:

- **Track-mount:** For use with the OneTrack or DataTrack track system. OneTrack models available with either DALI or DMX control.
- **Portable:** Use an M12 bolt to secure a clamp (provided separately, part number [HW7450](#)) to the luminaire. Available in different control variants:
  - DMX: Includes a yoke-mounted driver, and has a permanently installed power cord with 3-prong Edison connector. Region-specific connectors are available. Contact ETC for available options. Use L5-15 plugs on branch circuits with L5-15 receptacles only.
  - F-Drive: Includes a yoke-mounted driver for use with the F-Drive family of products.
- **Canopy:** Available in different control variants:
  - 0–10 V
  - DALI
  - DMX
  - F-Drive

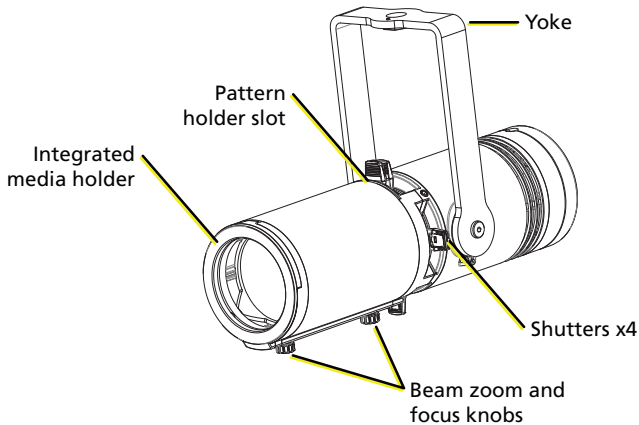

(Illustration shows luminaire body only)

# Safety

---



**WARNING:** Note the following safety warnings before use:

- Use the luminaire in dry locations only, where humidity does not exceed 90 percent (non-condensing).
  - Do not mount the luminaire on or near a flammable surface.
  - Check that the accessory holder is locked before mounting the luminaire.
  - Do not operate the luminaire without a lens installed.
  - Do not use this luminaire if a lens is deeply scratched or cracked. You must replace a lens when it is damaged.
- 



**AVERTISSEMENT :** Prendre connaissance des avertissements de sécurité suivants avant toute utilisation :

- Ne pas installer le projecteur sur ou à côté d'une surface inflammable.
  - Vérifiez que le porte-accessoires est verrouillé avant de monter le projecteur.
  - N'utilisez pas le projecteur sans que la lentille soit installée.
  - N'utilisez pas ce projecteur si la lentille présente des rayures ou des fissures profondes. Il faut remplacer la lentille si elle est abîmée.
- 

## IMPORTANT SAFEGUARDS

INSTRUCTIONS PERTAINING TO A RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

- Keep lamp away from materials that may burn.

## SAVE THESE INSTRUCTIONS

## 0–10 V, DALI, and DMX Canopy Luminaires



**WARNING: RISK OF ELECTRIC SHOCK! Power must be off when you perform this procedure.**

The luminaire must be installed by a qualified electrician in accordance with all national and local electrical and construction codes and regulations.

**AVERTISSEMENT : RISQUE DE DÉCHARGE ÉLECTRIQUE!**

L'alimentation doit être éteinte avant d'exécuter cette procédure.

## Track Luminaires



**WARNING: To reduce the risk of fire and electric shock, use the track-mount luminaire only with its designated track system (for example, OneTrack or DataTrack).**

**AVERTISSEMENT : Pour éviter le risque d'incendie ou de choc électrique, utiliser le luminaire à adaptateur pour rail uniquement avec son système de rail désigné (OneTrack ou DataTrack par exemple).**



**WARNING: Use the DataTrack track-mount luminaire with ceiling-mounted track only.**

The following symbols may appear on product labeling.

|  |                                                                                                                                       |                                                                                                                                                           |
|--|---------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | The luminaire must be installed at least 0.1 m (4.0 in) away from all lighted objects.                                                | Le luminaire doit être installé à au moins 0,1 m (4,0 po) de tout objet éclairé.                                                                          |
|  | General warning                                                                                                                       | Avertissement général                                                                                                                                     |
|  | This product should not be discarded as unsorted waste but must be sent to separate collection facilities for recovery and recycling. | Ce produit ne doit pas être jeté avec les déchets ménagers mais doit être déposé dans une collecte de déchets électroniques ou dans un point de collecte. |
|  | This product meets the safety requirements specified for Class II equipment according to IEC 61140 or IEC 60536.                      | Ce produit à Protection Classe II Double isolation est conforme aux normes IEC 61140 ou IEC 60536.                                                        |
|  | This product meets the safety requirements specified for Class III according to IEC 60536.                                            | Produit à Protection Classe III Très basse tension conforme à la norme IEC 60536.                                                                         |
|  | The product input or output is suitable for direct current only.                                                                      | L'entrée et la sortie de ce produit convient uniquement au courant continu.                                                                               |


## Help from ETC Technical Services

If you have questions that are not answered by this document, try the ETC support website at [support.etconnect.com](https://support.etconnect.com) or the main ETC website at [etconnect.com](https://etconnect.com). If none of these resources are sufficient, visit [etconnect.com/contactETC](https://etconnect.com/contactETC) and contact ETC Technical Services. Emergency service is available from all ETC offices outside of normal business hours.


When calling for help, take these steps first:

- Prepare a detailed description of the problem
- Go near the equipment for troubleshooting
- Find your ticket number if you have called in previously

# Install and Connect F-Drive Luminaires

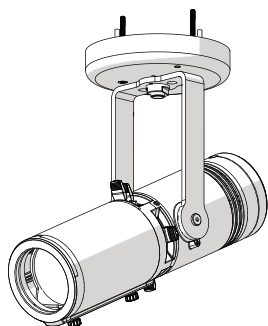

Canopy

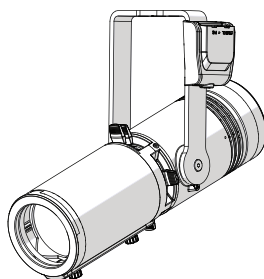

Portable

## Luminaire Wiring

Luminaire power and data in and out cables for the Irideon FPZ Plus (F-Drive) terminate to RJ45 connectors. Please note the following requirements for wiring:

- Use 0.25 mm<sup>2</sup> (23 AWG) or larger gauge conductors in Category-type cable terminated to the T568B standard. Not all Cat5 or Cat6 cables meet this gauge requirement.
- You can connect up to four luminaires along one run of cable when using RJ45 output from a compatible output card or driver. The total cable distance for each wiring run should not exceed 100 m (328 ft). For more details, see the *F-Drive R12 and W1 Wiring Reference Guide*, available for download at [etcconnect.com/F-Drive/Documentation](http://etcconnect.com/F-Drive/Documentation).

## Select the Driver



**CAUTION:** *You must configure the channel on the driver to 750 mA or less. Connecting the luminaire to a channel that is configured for more than 750 mA will shorten the life of the luminaire LEDs and may void the luminaire warranty.*

The Irideon FPZ Plus (F-Drive) luminaire is compatible with the F-Drive R12 CC-150 output card, the F-Drive W1 CC driver, or the F-Drive RX CC 8 card. Set the output channel for the luminaire to 750 mA or less. Be aware that:

- The compatible F-Drive products currently support a maximum of 700 mA.
- Third-party drivers may support higher values.
- Luminaires that are not in the "Plus" family of products may have lower maximum driver settings. Check the product labeling to verify the maximum driver settings.

For more information about compatible products, see the resources below, which are available for download at [etconnect.com/F-Drive/Documentation](https://etconnect.com/F-Drive/Documentation):

- *F-Drive Series R12 Installation Manual*
- *F-Drive Series W1 Installation Manual*
- *F-Drive R12 and W1 Wiring Reference Guide*
- *F-Drive B-Box4 Installation Guide*

The F-Drive System Design Tool is available at [etconnect.com/FDriveSysDesignTool](https://etconnect.com/FDriveSysDesignTool).

## RJ45 Pinout Information

### In Port

| Pin                                                                                                                                               | Description |
|---------------------------------------------------------------------------------------------------------------------------------------------------|-------------|
| 1                                                                                                                                                 | - *         |
| 2,6                                                                                                                                               | THRU 1**    |
| 3,7                                                                                                                                               | THRU 2**    |
| 4,8                                                                                                                                               | THRU 3**    |
| 5                                                                                                                                                 | + *         |
| *Pins 1 and 5 receive power from the source or the previous luminaire in line.<br>**These pins pass through power to the next luminaires in line. |             |

### Out Port

| Pin | Description   |
|-----|---------------|
| 1,5 | THRU 1        |
| 2,6 | THRU 2        |
| 3,7 | THRU 3        |
| 4,8 | No Connection |

# Use of Third-Party Drivers with Daisy-Chained Luminaires

Irideon FPZ Plus (F-Drive) luminaires can be controlled by third-party Class 2 or Low Voltage Limited Energy (LVLE) drivers that provide a maximum of 48 VDC. To daisy-chain luminaires and still have independent channel functionality, you must wire the first luminaire in the chain as described below. (The RJ45 outputs on F-Drive natively support this wiring configuration.) Configure the drivers to a maximum of 750 mA.


| Channel                 | Input Pins for First Luminaire in Daisy-Chain | Description |
|-------------------------|-----------------------------------------------|-------------|
| 1<br>(First luminaire)  | 1                                             | Channel 1 - |
|                         | 5                                             | Channel 1 + |
| 2<br>(Second luminaire) | 2                                             | Channel 2 - |
|                         | 6                                             | Channel 2 + |
| 3<br>(Third luminaire)  | 3                                             | Channel 3 - |
|                         | 7                                             | Channel 3 + |
| 4<br>(Fourth luminaire) | 4                                             | Channel 4 - |
|                         | 8                                             | Channel 4 + |

After wiring the first luminaire as noted above, you can daisy-chain additional luminaires following the cable connection information in [Luminaire Wiring on page 9](#).

# Install Canopy Luminaire (F-Drive)




**Note:** The canopy luminaire can be installed directly on 4 in and 4-11/16 in back boxes, or on back boxes with round cover plates. The canopy luminaire cannot be installed on 1-gang back boxes or trim rings.

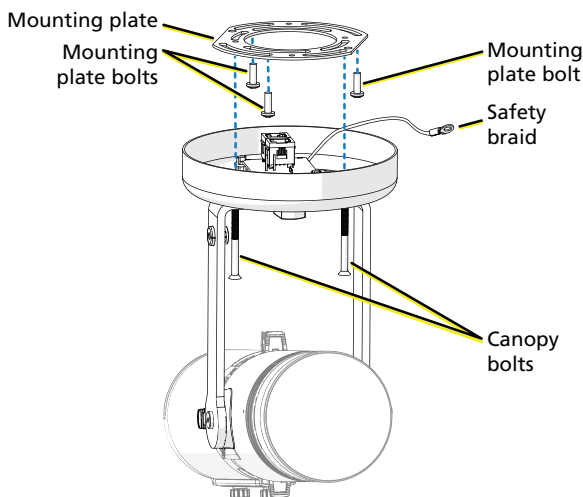

1. Remove the mounting plate from the luminaire by removing the two canopy bolts.
2. Using two of the mounting plate bolts, secure the mounting plate to the installed back box (not included).

## Mounting plate installation detail

Install the mounting plate screws in one of the three position-pairings shown.

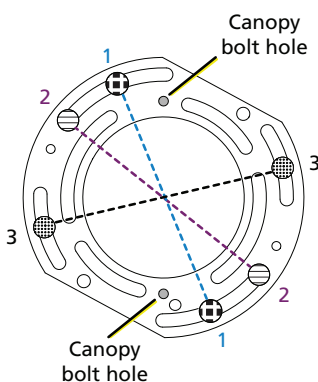



3. Place the copper safety braid loop over the third mounting plate bolt, and then attach the mounting plate bolt to the back box to help secure the fixture during installation.
4. Connect a power and data in cable from the driver or ETC breakout box to the "IN" port on the luminaire. If you are daisy-chaining luminaires, be careful to connect the cables to the correct "IN" and "OUT" ports. (The cable from the "OUT" port on one luminaire connects to the "IN" port of the next luminaire.) Incorrect connections will result in improper operation of the luminaires.
5. Use the canopy bolts to secure the luminaire to the mounting plate.
6. Open all four shutter blades by sliding them outward until they stop.
7. Focus the luminaire as needed. See [Focus and Setup on page 32](#).

## Connect Portable Luminaire (F-Drive)

---




**Note:** For the portable luminaire, use an M12 bolt to secure a clamp (provided separately, part number [HW7450](#)) to the luminaire.


---

1. Connect a power and data in cable from the driver or ETC breakout box to the "IN" port on the luminaire. If you are daisy-chaining luminaires, be careful to connect the cables to the correct "IN" and "THRU" ports. (The cable from the "THRU" port on one luminaire connects to the "IN" port of the next luminaire.) Incorrect connections will result in improper operation of the luminaires.
2. Open all four shutter blades by sliding them outward until they stop.
3. Focus the luminaire as needed. See [Focus and Setup on page 32](#).


# Install and Connect All Other Luminaires

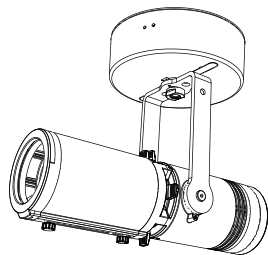


Canopy

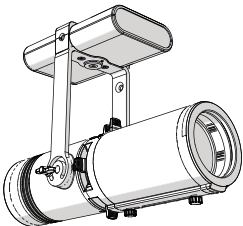


Portable

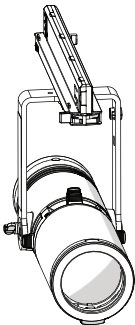

Track-mount  
(OneTrack-DALI)

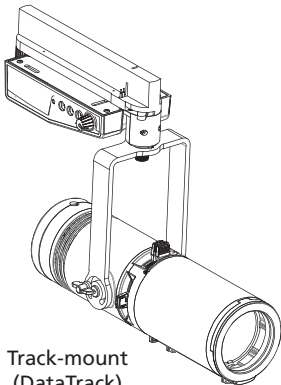


Track-mount  
(DataTrack)

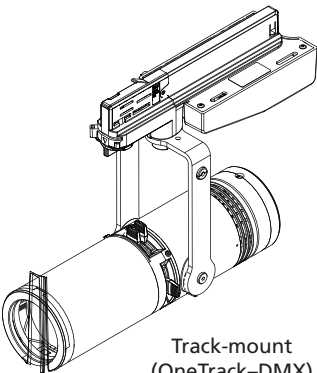


Track-mount  
(OneTrack-DMX)

# Install OneTrack (DMX) Luminaire


1. Before you begin, verify that the adapter is unlocked. (Images at right show just the OneTrack adapter.)

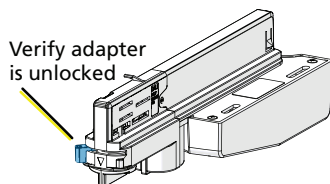


2. Orient the adapter to the track as shown at right, and then insert the adapter into the track. The tab at the end of the adapter locks into the track when the fixture is fully seated.

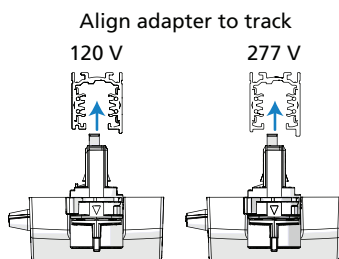

**WARNING:** When using the circuit selection lock, ensure that the selected circuit is a constant power circuit. Selecting a dimmable circuit may cause luminaire damage that will void the ETC warranty.

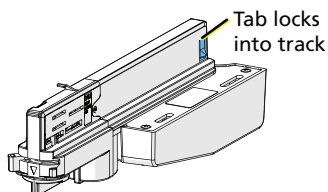


3. Flip the locking tab to the opposite side to lock the adapter, and then rotate the circuit selection knob to select the correct circuit.

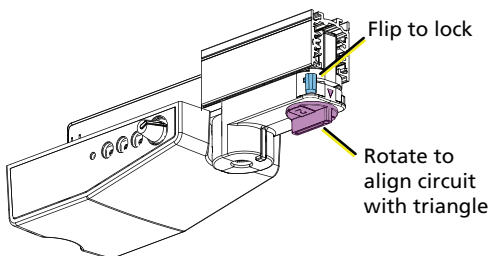

# Install OneTrack (DALI) Luminaire


1. Before you begin, verify that the adapter is unlocked on both ends. (Images at right show just the OneTrack adapter.)

Verify adapter is unlocked on both ends

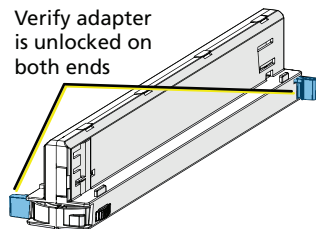

2. Orient the adapter to the track as shown at right, and then insert the adapter into the track.


Align adapter to track

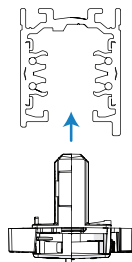

**WARNING:** When using the circuit selection lock, ensure that the selected circuit is a constant power circuit. Selecting a dimmable circuit may cause luminaire damage that will void the ETC warranty.

3. Flip the locking tabs to the opposite sides to lock the adapter, and then rotate the circuit selection knob to select the correct circuit. For OneTrack (DALI) luminaires, select circuit 1.

Flip to lock

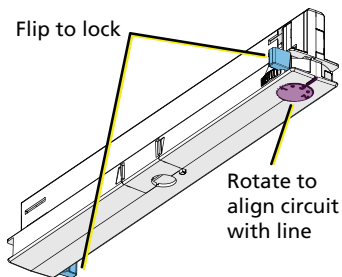

## Modify the Drive Current




**CAUTION:** *You must set the OneTrack (DALI) drive current to 750 mA or less. Setting the drive current to more than 750 mA will shorten the life of the luminaire LEDs and may void the luminaire warranty.*

The OneTrack (DALI) luminaire is set to 750 mA, but you can modify the drive current to a lower setting if needed using DIP switches on the OneTrack adapter.


1. Remove the screws on the side of the OneTrack adapter, and then squeeze the sides of the cover to remove it.
2. Use the information on the luminaire label to set the DIP switches to the desired setting. Do not exceed 750 mA.
3. Reinstall the cover and secure it with the screws.

Remove screws,  
squeeze sides of  
cover to expose  
DIP switches

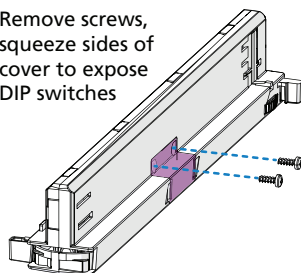

## Install DataTrack Luminaire

1. Insert the DataTrack adapter into the track. The adapter only fits into the track one way with the tabs nesting into the track's groove.
2. Rotate the locking mechanism to lock the adapter into place.

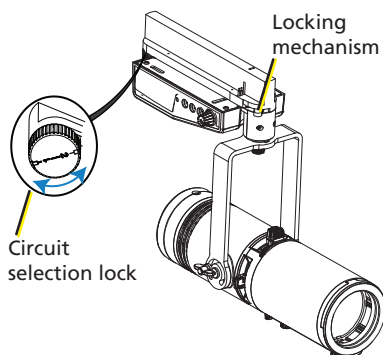

**WARNING:** When using the circuit selection lock, ensure that the selected circuit is a constant power circuit. Selecting a dimmable circuit may cause luminaire damage that will void the ETC warranty.

3. Use the circuit selection lock to select the circuit. The desired circuit number should point toward the center of the adapter.

## Install Canopy Luminaire (DMX)



**Note:** *The canopy luminaire can be installed directly on 4 in and 4-11/16 in back boxes, or on back boxes with round cover plates. The canopy luminaire cannot be installed on 1-gang back boxes or trim rings.*


## Install the Voltage Barrier (DMX)

The DMX variant of the canopy luminaire includes a voltage barrier to separate the data network from the line voltage inside the back box. Voltage barriers are provided for both 4 in and 4-11/16 in back boxes.



**CAUTION:** *DMX control is a Class 2 circuit. DMX wiring cannot be run through the same conduit as line voltage power-supply conductors. Separate the line voltage from the data side in the back box. Install the voltage barrier provided by ETC.*

Install the voltage barrier in the back box with the provided bolt (see images at right, showing a 4 in back box). The voltage barrier blocks two or more through holes in the back of the junction box, depending on how it is oriented, plus the center conduit knockout in the back of the junction box and the center knockouts on two sides of the junction box. The blocked holes and knockouts are marked with "X" in the illustration to the right.

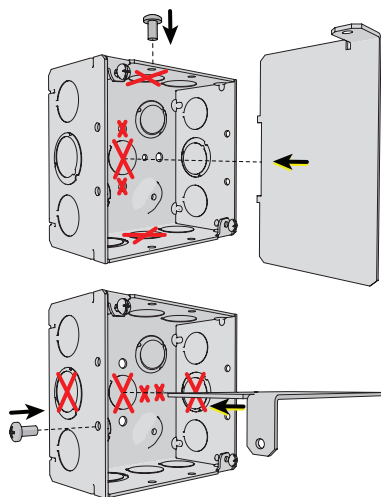

## Connect Canopy Wiring (DMX)

Cable preparation instructions for DMX termination are included in the termination kits, and are also available for download at [etcconnect.com](http://etcconnect.com).

1. Remove the adhesive tape or fasteners securing the mounting plate to the luminaire to free the mounting plate from the canopy enclosure.




**WARNING: RISK OF ELECTRIC SHOCK!** Install the cover plate as directed for installations where the interior of the canopy enclosure could be exposed after installation with only the mounting plate. For example, install the cover plate when installing to a surface-mount back box.


**AVERTISSEMENT : RISQUE DE DÉCHARGE ÉLECTRIQUE!** Installez la plaque de protection comme indiqué pour les installations où l'intérieur de la rosace de plafond pourrait être exposé après l'installation avec uniquement la plaque de montage. Par exemple, installez la plaque de protection lors de l'installation sur un boîtier arrière à montage en surface.

---

2. Are you flush-mounting the luminaire or surface-mounting the luminaire?
  - Flush-mounting: Continue to step 3.
  - Surface-mounting:  
Position the cover plate on top of the mounting plate before wiring the luminaire. The cover plate is required when the interior of the canopy enclosure could be exposed after installation with only the mounting plate (the mounting surface is smaller than the canopy enclosure).
3. Terminate DMX/RDM input from the control source to the back box.
  - a. Follow the DMX termination kit instructions provided with the product to terminate the control wiring.
  - b. Install the connector with wires terminated to the DMX/RDM Input receptacle on the termination board.
4. Optionally, terminate DMX/RDM thru to the next device in the DMX data run. Up to 32 DMX/RDM devices can be daisy-chained together per data run.
  - a. Order additional termination kits separately (request ETC part number [4100A1022](#)). Follow the DMX termination kit instructions to terminate the control wiring.
  - b. Install the connector with wires terminated to the DMX/RDM Thru receptacle on the termination board.




5. Connect the building ground wire to the power block on the luminaire.
6. Following the label on the mounting plate, attach the power wires to the power block.

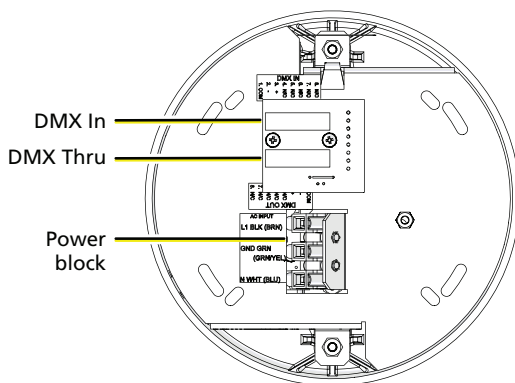





# Install the Mounting Plate and Complete the Wiring (DMX)

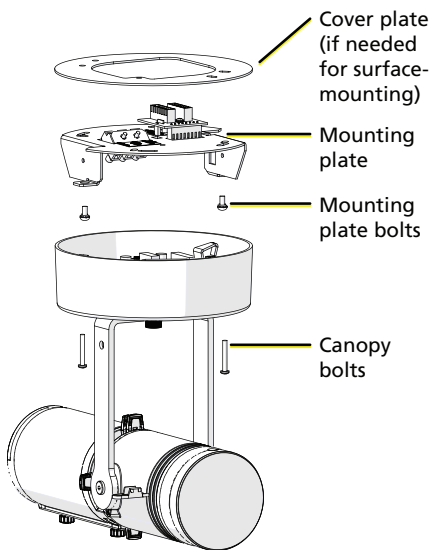


1. Secure the mounting plate (or the combination of mounting plate and cover plate for surface-mounting) to the installed back box, positioning the plate so that the power side and data side are separated by the voltage barrier in the back box. See [Install the Voltage Barrier \(DMX\) on page 18](#).

| For this structure... | ...secure mounting plate using:   |
|-----------------------|-----------------------------------|
| 4-11/16 in back box   | Large oval slots (see 1 at right) |
| 4 in back box         | Small oval slots (see 2 at right) |

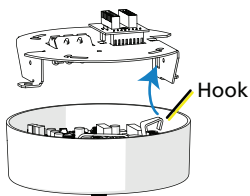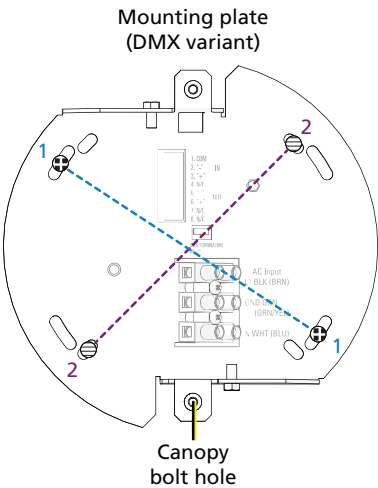

2. Use the hook in the canopy enclosure to hang the luminaire from the mounting plate while you complete the luminaire wiring.
3. If desired, manually set the DMX address on the luminaire using the three addressing dials in the canopy. See [Set the DMX Address at the Luminaire on page 27](#).



4. Connect the pre-wired DMX connector on the luminaire to the mated connector on the mounting plate (shown below).
5. Terminate DMX/RDM data signal for the last DMX/RDM device in the data run by setting the termination switch to ON (to the right, as shown below). All other devices in the data run should retain the default setting for the termination switch (OFF).
6. Following the label on the mounting plate, attach the power wires to the power block.

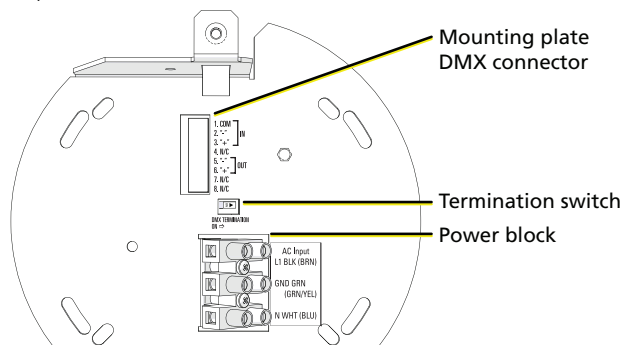

7. Use the canopy bolts to secure the luminaire to the mounting plate.



**CAUTION:** *Make sure that the wiring is clear of the mounting plate before you secure the luminaire.*

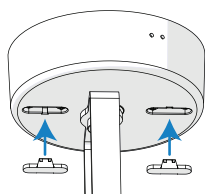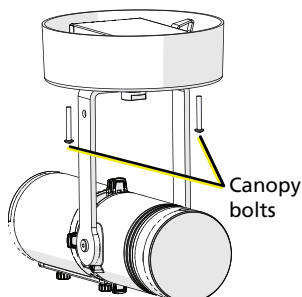

Oval-shaped covers

8. Insert the oval-shaped covers into the canopy enclosure to cover the canopy bolt openings.
9. Restore power at the disconnect device.

# Install Canopy Luminaire (0–10 V and DALI)



**Note:** The 0–10 V driver conforms to IEC 60929 Annex E. Of the 0–10 V range, use 0–1 V to set the minimum level, and use 1–10 V for continuous dimming.




**Note:** The canopy luminaire can be installed directly on 4 in and 4-11/16 in back boxes, or on back boxes with round cover plates. The canopy luminaire cannot be installed on 1-gang back boxes or trim rings.



**WARNING: RISK OF ELECTRIC SHOCK!** Install the cover plate as directed for installations where the interior of the canopy enclosure could be exposed after installation with only the mounting plate. For example, install the cover plate when installing to a surface-mount back box.

**AVERTISSEMENT : RISQUE DE DÉCHARGE ÉLECTRIQUE!** Installez la plaque de protection comme indiqué pour les installations où l'intérieur de la rosace de plafond pourrait être exposé après l'installation avec uniquement la plaque de montage. Par exemple, installez la plaque de protection lors de l'installation sur un boîtier arrière à montage en surface.


1. Remove the adhesive tape or fasteners securing the mounting plate to the luminaire to free the mounting plate from the canopy enclosure.

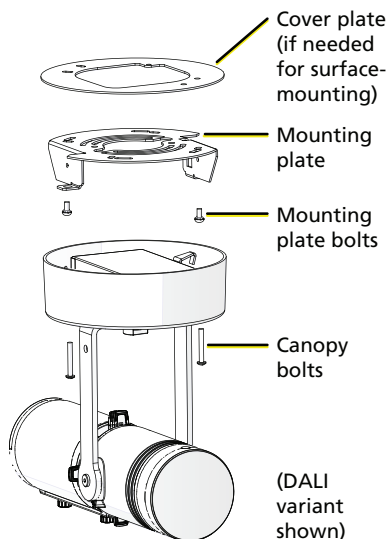


2. Are you flush-mounting the luminaire or surface-mounting the luminaire?

- Flush-mounting: Using the mounting plate bolts, secure the mounting plate to the installed back box.
- Surface-mounting: Position the cover plate on top of the mounting plate before wiring the luminaire. The cover plate is required when the interior of the canopy enclosure could be exposed after installation with only the mounting plate (the mounting surface is smaller than the canopy enclosure).

Mounting plate  
(0–10 V and DALI variants)

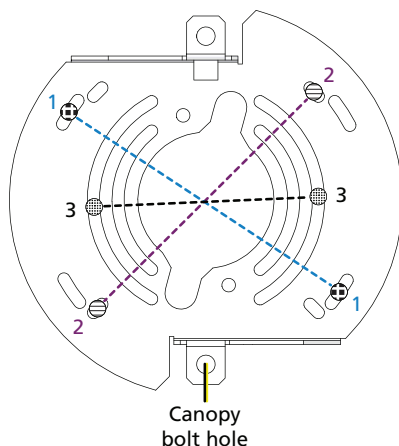

| For this structure...  | ...secure mounting plate using:  |
|------------------------|----------------------------------|
| 4-11/16 in back box    | Large oval slots (see 1 at left) |
| 4 in back box          | Small oval slots (see 2 at left) |
| Mud ring and round box | Circular slots (see 3 at left)   |

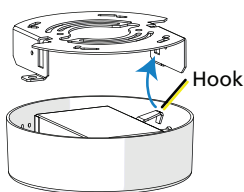

3. Use the hook in the canopy enclosure to hang the luminaire from the mounting plate while you complete the luminaire wiring.
4. Connect the building ground wire to the ground wire on the luminaire, following local electrical codes.


5. Connect the supply power wires to the luminaire wiring using the included WAGO® connectors.

- For 120 V luminaires: Connect the black wire to line and the white wire to neutral.
- For 230 V luminaires: Connect the brown wire to line and the blue wire to neutral.


6. Connect the data wires to the luminaire wiring using the included WAGO connectors.

- For 0–10 V luminaires: Connect the gray wire to data - and the purple wire to data +.
- For DALI luminaires: Connect the purple wires to data - and data +.

7. Use the canopy bolts to secure the luminaire to the mounting plate.
8. Insert the oval-shaped covers into the canopy enclosure to cover the canopy bolt openings.

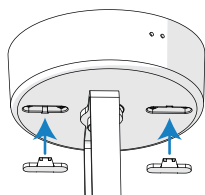

Oval-shaped covers

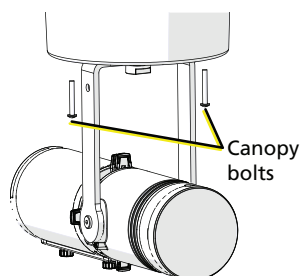


9. Restore power at the disconnect device.

# Install Portable Luminaire (DMX) on Unistrut Track

You can install the portable luminaire on Unistrut track using the Irideon FPZ Unistrut Kit ([7191K1000](#)).

1. Insert the spacer into the driver box through the hole in the top of the yoke.
2. Use the yoke bolt and washers to fasten the luminaire to the Unistrut track.

Within the EU, use an M12 bolt and appropriate washers in place of the provided kit hardware.

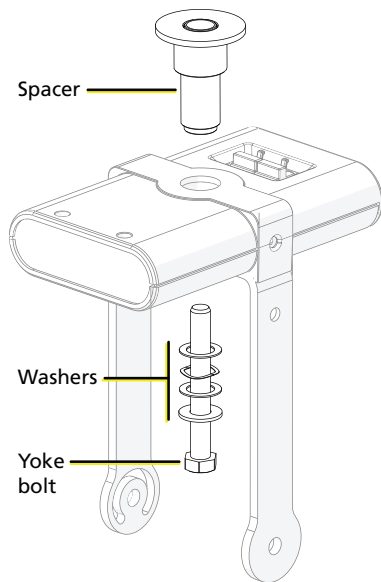

## Connect Cables to Portable Luminaire (DMX)

1. Connect RJ45 data cables to the top of the driver box, one for data in and one for data thru (in either position), as needed.
  - To order RJ45-to-socket XLR adapter, use part number [W6538](#).
  - To order RJ45-to-plug XLR adapter, use part number [W6539](#).
2. Connect the luminaire to the power source.



### Note:

- *The Irideon FPZ is not self-terminating. You must terminate the last luminaire in line with a 120 Ohm resistor. Please contact your ETC customer service representative to purchase part number [N4086](#).*
- *No more than 32 DMX devices can be daisy-chained together on a single run. For runs of luminaires totaling more than 32 DMX devices, use a DMX splitter to split the DMX runs.*
- *When using DMX over Cat5, use Cat5e or better. Cable distance must not exceed 300 m (1000 ft).*
- *The Irideon FPZ cannot be controlled via network protocols and should not be connected to a system network.*

## Portable Luminaire DMX Pinout

| Pin | Wire Color   | Description   |
|-----|--------------|---------------|
| 1   | White/Orange | DMX1 +        |
| 2   | Orange       | DMX1 -        |
| 3   | White/Green  | DMX2 +        |
| 4   | Blue         | Not Connected |
| 5   | White/Blue   | Not Connected |
| 6   | Green        | DMX2 -        |
| 7   | White/Brown  | Iso Common    |
| 8   | Brown        | Iso Common 2  |

## Configure DMX Luminaires

### Set the DMX Address at the Luminaire

You can set the DMX address using RDM, but you can also set the DMX address on the luminaire itself, if necessary. The luminaire uses the last address that you set, regardless of whether you set it via RDM or locally on the luminaire.



There are three addressing dials on the track adapter (track-mounted luminaire), in the canopy (canopy luminaire), or on the driver box (portable luminaire). To set the DMX address, use a small flatblade screwdriver to move the arrow to the desired address number.

DMX addresses must be set between 1 and 512. Each luminaire must be considered a separate DMX device for the purpose of DMX line-loading calculations. The Irideon FPZ has one DMX channel, which controls intensity.




**Note:** *When using RDM with track-mounted luminaires, ETC recommends connecting no more than 20 luminaires on a single run.*

---

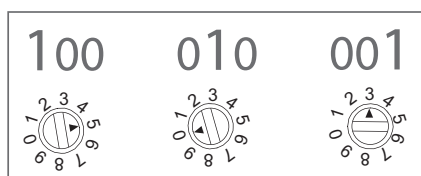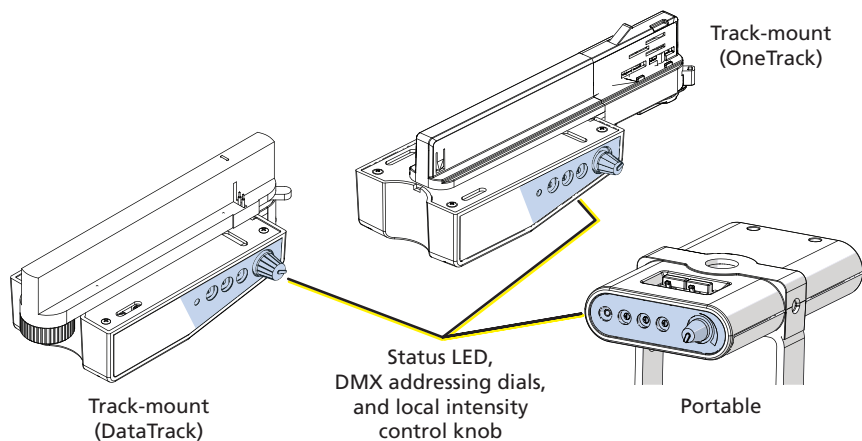

In these addressing examples, the luminaire is addressed to 503.

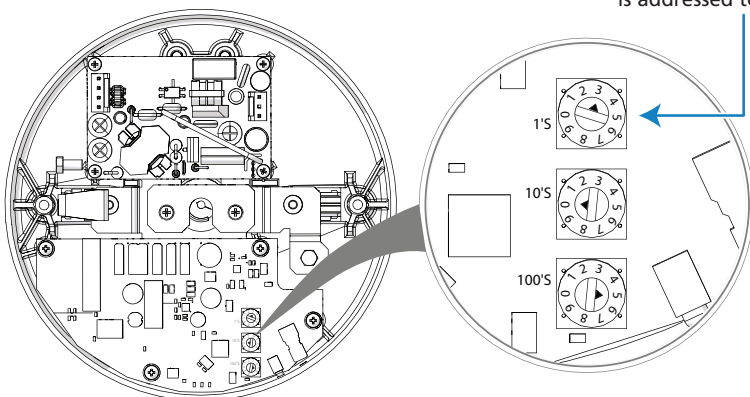

Canopy  
(mounting plate removed)



## Alternative DMX Addressing Functions

Certain DMX addresses are reserved for special functions. Addresses 700 and above can be used for setting the intensity level of the luminaire. The second and third address numbers set the intensity level. The intensity knob is ignored when using these DMX addresses. See the following table for examples.

| DMX Address | Function           |
|-------------|--------------------|
| 701         | Intensity at 1 %   |
| 710         | Intensity at 10 %  |
| 725         | Intensity at 25 %  |
| 799         | Intensity at 99 %  |
| 800         | Intensity at 100 % |

## Adjust the Local Intensity

A local intensity knob is located on the track adapter (track-mounted luminaire) or on the driver box (portable luminaire). See the illustration in [Set the DMX Address at the Luminaire on page 27](#).

On the canopy luminaire (DMX variant only), the local intensity adjustment control is located on the side of the canopy (next to the status LED). To adjust the local intensity knob on the canopy luminaire, you will need a small flatblade screwdriver (jeweler's screwdriver).

You can adjust the local intensity with or without DMX being present.

- When DMX is not present, you can control the intensity.
- When DMX is present, you can set the maximum light output. Dimming will be proportional in relation to that setting. When the local intensity is set to Off, the maximum light level over DMX is 100%.
- When DMX is lost and the local intensity is set to Off, the light will go dark.
- When DMX is lost and the local intensity is set to a level greater than 0, the light goes to the level of the local intensity setting.

# Status LED

The status LED indicates the DMX status. When DMX is present, the LED turns on for 10 seconds, and then it turns off.



**Note:** *A change to the DMX start address, the local intensity, or the presence of DMX will “wake” the status LED.*

When the local intensity is set to Off, the status LED will flash when there is a loss of DMX.

With the local intensity set to any other position, the status LED will flash for 10 seconds when there is a loss of DMX. Then the LED will turn off.

## RDM Values

| Parameter         | RDM PID | Value                                       |
|-------------------|---------|---------------------------------------------|
| Manufacturer ID   | 0x6574  | Electronic Theatre Controls                 |
| Model ID          | 0x900   | Irideon FPZ                                 |
| DMX Start Address | 0x00F0  | Range = 1–512                               |
| Personality ID    | 0x00E0  | 1=DMX<br>2=Local                            |
| Output Frequency  | 0x8123  | 0 = Standard (1.2 kHz)<br>1 = High (25 kHz) |

# Initial Power Up

## 0–10 V Luminaires

Apply power and dim the luminaire using a 0–10 V controller.



**Note:** *The 0–10 V driver conforms to IEC 60929 Annex E. Of the 0–10 V range, use 0–1 V to set the minimum level, and use 1–10 V for continuous dimming.*

---

## DALI Luminaires

Use a DALI configuration and commissioning tool to configure the DALI address of the luminaire.

## DMX Luminaires

Control and configure the luminaire over a DMX/RDM control network or directly from a connected computer running appropriate software. When controlling the luminaire directly from a PC, a Gadget II interface or DMX/RDM gateway is required.



**Note:** *Changing the address via RDM will override the local DMX addressing dials. However, if you change the addressing dials after you set the address via RDM, the addressing dials will override the RDM setting. See [Set the DMX Address at the Luminaire on page 27](#).*

---

## Identify

You can send an identify command using ETC Concert or a third-party RDM controller. Luminaires will respond to an RDM identify command by blinking on and off: 500 ms on, 500 ms off, until the identify command is ended.

## F-Drive Luminaires

1. Verify that each luminaire is connected to a Constant Current (CC) driver or output card before you power up the luminaires. See the installation manual for your F-Drive for more compatibility information ([etcconnect.com/F-Drive/Documentation](http://etcconnect.com/F-Drive/Documentation)).
2. Use Concert to verify that each CC channel is set to output a maximum of 750 mA.
3. Refer to the installation manual for your F-Drive for information about the power up procedure for the driver.

## Identify

You can send an identify command to individual channels of an R12 output card or W1 driver using ETC Concert or a third-party RDM controller. Luminaires connected to an F-Drive will respond to an RDM identify command by blinking on and off: 500 ms on, 500 ms off, until the identify command is ended. See the F-Drive Device Package Help in Concert or the installation manual for your F-Drive for information about this RDM command.


## Focus and Setup

Images in this section show the Irideon FPZ luminaire body and yoke only.

### Adjust the Tilt


Image shows the yoke from the canopy version of the fixture.

1. Loosen, but do not remove the yoke locking knob.
2. Tilt the luminaire as needed.
3. Tighten the yoke locking knob.

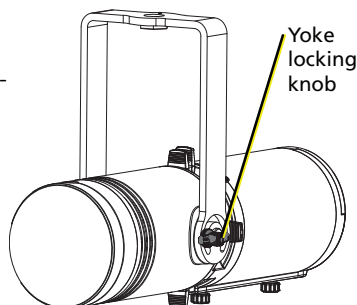

### Zoom and Focus the Beam

1. Loosen the beam focus or zoom knob located under the barrel. Do not remove either knob.
2. Slide the lens forward or backward to achieve the desired beam edge or angle.
3. Once the luminaire is focused, tighten the knobs.

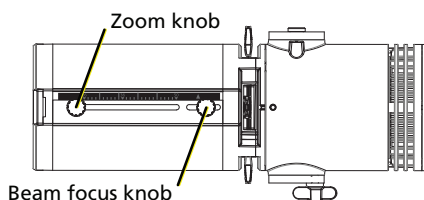


# Shape the Beam

You can shape the beam using the four shutters or with a pattern.

## Shape the Beam with Shutters

The luminaire has four shutters: left, right, top, and bottom. Each shutter can be pulled out or pushed in to create the desired beam shape.

Once the shutters are set, you can lock the shutters in place by using a 3 mm hex key (provided).

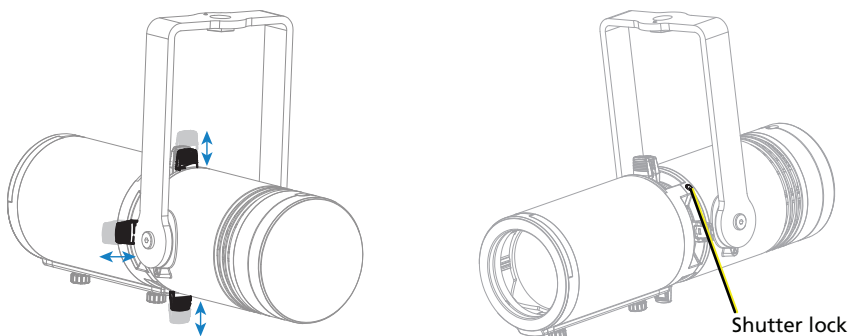


## Shape the Beam with a Pattern

The luminaire has a pattern-holder slot on the top side of the shutter barrel, in front of the shutter. It accommodates a glass or stainless steel E-size (37.5 mm with a 25.4 mm image area) pattern. The maximum pattern thickness that can be accommodated is 4 mm (0.16 in).

When the slot is not in use, a small plastic cover prevents light leakage.

1. Slide the cover knob on the luminaire completely to the side to expose the slot.
2. Insert the pattern holder.

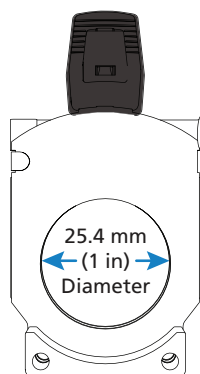


### Note:

- When not using a pattern, remove the pattern holder and close the cover to prevent distortion of the beam shape.
- Ensure that the pattern-holder slot is on the top side of the shutter barrel. If necessary, rotate the shutter barrel to position the pattern-holder slot on the top side.

## Rotate the Lens Barrel

1. Unlock the rotating barrel lock using the 2 mm hex key (provided).
2. Rotate the barrel to the desired location.
3. Lock the rotating barrel lock using the 2 mm hex key (provided).

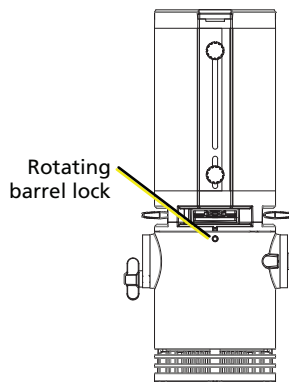

## Use the Integrated Media Holder

The Irideon FPZ comes equipped with an integrated media holder, which is a metal frame used to hold color media (often referred to as gel) or diffusion in front of the lens. The media holder is equipped with a magnetic retaining clip that prevents the media from falling out. The integrated media holder can take color media, diffusion, or dichroic glass with a 66 mm (2.6 in) diameter.




**WARNING: Check that the accessory holder is locked before mounting the luminaire.**

**AVERTISSEMENT : Vérifiez que le porte-accessoires est verrouillé avant de monter le projecteur.**

## Install Color Media or Diffusion


1. Release the magnetic retaining clip by gently pushing it up.
2. Insert the media.
3. Replace the media holder by aligning the tab at the top of the media holder with the inset on the front casting.

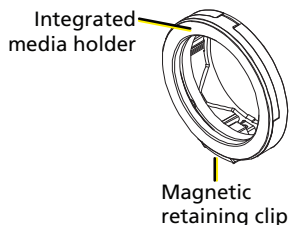

## Install Dichroic Glass

The integrated media holder accommodates 1.75 mm-thickness dichroic glass.

1. Release the magnetic retaining clip by gently pushing it up.
2. Place the dichroic glass into the groove.
3. Replace the media holder by aligning the tab at the top of the media holder with the inset on the front casting.

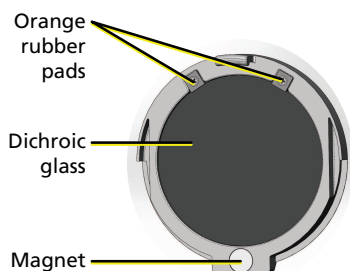


## Clean the Lenses



**WARNING:** Do not use ammonia-based cleaners or other harsh commercial cleaners. Clean lens only as directed.

Commercially available glass cleaning agents should be avoided as they may contain ammonia, other harsh chemical detergents, or abrasive agents. These cleaners may damage the lens surface. Do not immerse or soak the lens in any cleaning solution.

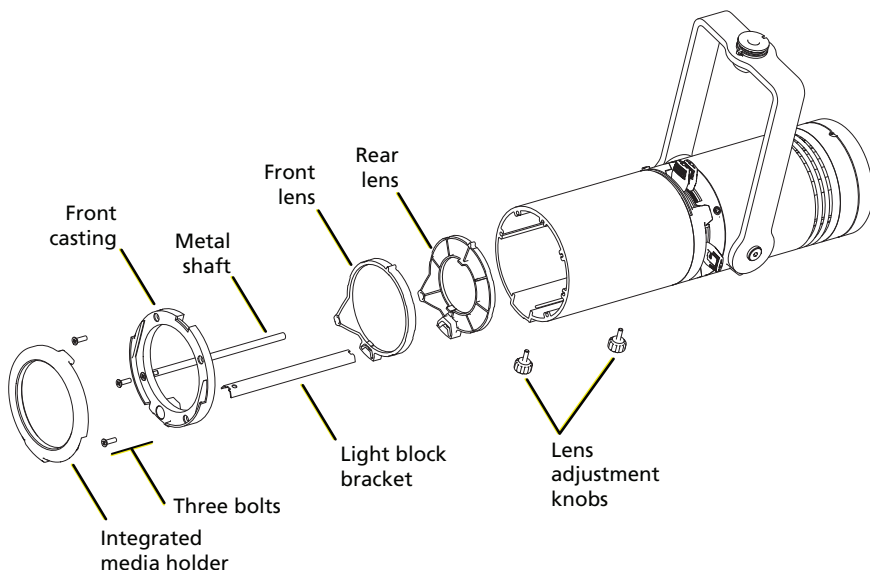

1. Remove the integrated media holder.
2. Use a Phillips screwdriver to remove the three bolts from the front of the luminaire.
3. Remove the front casting and the metal shaft.
4. Remove the light block bracket.
5. Remove the lens adjustment knobs.
6. Remove the front and rear lens holders.
7. Remove dust with a blast of oil-free air or wipe with a clean, lint-free cloth. Isopropyl alcohol, distilled water, or a 50%-50% mixture of each can be used to clean the glass surface.
8. Replace the lenses.



**Note:** *You may find it easier to insert the metal shaft into its opening on each lens before replacing the lenses.*

---

9. Replace the lens adjustment knobs.
10. Replace the light block bracket. Make sure that it fits into its opening on each lens.
11. Replace the metal shaft if you have not previously done so.
12. Replace the front casting and secure it with the bolts.
13. Replace the integrated media holder.



# Specifications and Compliance

For current and complete compliance and specifications, see the Irideon FPZ datasheet at [etconnect.com](http://etconnect.com).

## FCC Compliance

### Irideon FPZ

(For any FCC matters):

Electronic Theatre Controls, Inc.  
3031 Pleasant View Road  
Middleton, WI 53562  
+1 (608) 831-4116  
[etconnect.com](http://etconnect.com)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received; including interference that may cause undesired operation. Visit [etconnect.com/products](http://etconnect.com/products) for current and complete compliance information including FCC compliance.



**Note:** *This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. Any modifications or changes to this product not expressly approved by Electronic Theatre Controls, Inc. could void the user's authority to operate the product. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at their own expense.*

---







**Corporate Headquarters** ■ Middleton, WI, USA | +1 608 831 4116  
**Global Offices** ■ London | Rome | Holzkirchen | Paris | Hong Kong | Dubai | Singapore  
New York | Orlando | Los Angeles | Austin | © 2025 Electronic Theatre Controls, Inc.  
**Web** [etcconnect.com](https://etcconnect.com) | **Support** [support.etcconnect.com](https://support.etcconnect.com)  
**Contact** [etcconnect.com/contactETC](https://etcconnect.com/contactETC) | Trademark and patent info: [etcconnect.com/ip](https://etcconnect.com/ip)  
Third-party license agreement info: [etcconnect.com/licenses](https://etcconnect.com/licenses) | Product information and specifications subject to change. ETC intends this document to be provided in its entirety.  
7191M2110 Rev B Released 2025-08